

未来厨房设备安装调试说明

Future Kitchen Installation Instructions



目录

一、 硬件与软件的识别	2
Hardware and Software Identification	2
二、 开关机方法	4
Power On and Off Methods	4
三、 安装流程	5
Product Assembly	5
四、 游戏使用说明	6
Game Instructions	6
五、 维护说明	8
Maintenance Instructions	8
一、 常见故障及处理方法 Common Faults & Solutions	8
二、 使用与维护注意事项 Usage & Maintenance Notes	9
三、 核心规范 Core Rules	10

一、硬件与软件的识别

Hardware and Software Identification

硬件部分 Hardware Part

1、电脑主机

Computer host



2、无线键鼠套装

Wireless Keyboard and Mouse Combo



3、显示器

Monitor



4、感应模块组

Induction Module Group



5、无线网卡

Wireless Network Card



6、小音响

Speaker



7、柜门磁吸钥匙

Magnetic Key



8、主机遥控开关

Host Remote Control Switch



9、USB 连接线

USB connection cable



10、HDMI 视频线

HDMI Video Cable



软件部分 Software Part

互动游戏图标 Interactive Game Icon



二、开关机方法

Power On and Off Methods

1、开机方式 Power On Method

按下配件盒里面的主机遥控开关即可开机，游戏将自动运行。

Press the host remote control switch inside the accessory box to turn on the device, and the game will run automatically.

2、关机方式 Power Off Method

按住键盘上的 ALT+F4 退出游戏，使用鼠标点击电脑桌面右下角开始按钮，选择电源 --- 再选择关机，即可正常关机。

Press and hold ALT+F4 on the keyboard to exit the game. Click the Start button at the bottom right of the computer desktop with the mouse, select Power, and then select Shut down to complete normal shutdown.

也可以直接按主机遥控开关进行关机操作。

You can also directly press the host remote control switch to shut down the device.

(请勿直接拔电源插头，以免损坏电脑主板)

(Do not unplug the power plug directly to avoid damaging the computer motherboard)

三、安装流程

Product Assembly

1. 使用柜门磁吸钥匙打开门锁。

Use the cabinet magnetic key to open the door lock.

2. 将显示器的 HDMI 线和触控线（USB 接口）插入电脑主机。

Insert the HDMI cable and touch cable (USB interface) of the monitor into the computer host.

3. 将音响的供电 USB 线和音频线插入电脑主机。

Insert the power supply USB cable and audio cable of the speaker into the computer host.

4. 将感应器的 USB 连接线（橙色端口）插入电脑主机。

Insert the USB connection cable (orange port) of the sensor into the computer host.

5. 将无线网卡和无线键鼠接收器插入电脑主机，关上门锁。

Insert the wireless network card and wireless keyboard-mouse receiver into the computer host, and close the door lock.

四、游戏使用说明

Game Instructions

使用说明 Instructions

玩法说明 How to Play

1. 开始游戏后，屏幕上随机出现三份菜单；

After the game starts, three random menus will appear on the screen.

2. 小朋友需要在 5 分钟内找到菜谱对应食材；

Children need to find the matching ingredients within 5 minutes.

3. 食材拿取正确或错误均有提示；

There will be prompts for correct or incorrect ingredient selection.

4. 完成 3 道菜制作即挑战成功；

Complete 3 dishes to win the challenge.

5. 台面有仿真小灶台，开关开启灯光与风力效果；

The counter has a simulation stove; turn on the switch for light and wind effects.

注意事项 Rules & Safety

- 请按先后顺序排队，勿插队；

Please queue in order, no cutting in line.

- 请勿撕扯玩具；

Do not tear or damage the toys.

- 请勿拍打屏幕；

Do not hit or slap the screen.

- 玩具一次不可扫描多件；

Only scan one toy at a time.

- 玩具请勿带离此区域；

Do not take toys out of this area.

五、维护说明

Maintenance Instructions

一、常见故障及处理方法 **Common Faults & Solutions**

1. 显示器不亮 / 无画面 **Monitor no display / No picture**

- 检查设备是否通电，电源线是否插紧

Check if the device is powered on and power cable is securely connected

- 确认显示器开关已开启、主机正常开机

Confirm monitor power is on and host is running normally

- 检查 HDMI/VGA 视频线连接是否牢固

Check HDMI / VGA cable connection is firm

2. 电脑无法开机 **Computer cannot start up**

- 电源检查：确认电源插头通电，必要时更换电源线或检查电源按钮

Power check: Ensure power plug is connected; replace power cable or check power button if needed

- 内存与显卡：重新拔插并擦拭金手指，检查散热风扇

Memory & Graphics card: Reinsert and clean golden contacts; check cooling fan

- 主板与 CPU：检查是否异常，故障需专业维修

Motherboard & CPU: Check for abnormalities; professional repair required if faulty

- 系统问题：重启无效直接联系厂家，禁止自行修改系统文件

System issue: Contact manufacturer directly if restarting fails; DO NOT modify system files

二、使用与维护注意事项 **Usage & Maintenance Notes**

1. 电脑主机 **Host Computer**

- 开关机：按标准流程操作，严禁直接拔电源

Power on/off: Follow standard procedure; NEVER unplug power directly

- 散热：每年更换 CPU/GPU 散热膏，保持机箱通风顺畅

Cooling: Replace CPU/GPU thermal paste yearly; keep chassis ventilation smooth

- 系统：设置平衡 / 节能模式，关闭不必要自启动与后台程序

System: Set balanced/power saving mode; disable unnecessary startup & background programs

- 定期检查线缆与接口，避免松动

Regularly check cables and connectors to avoid looseness

2. 显示器 **Monitor**

- 避免长时间静止画面，合理调节亮度与对比度

Avoid static images for a long time; adjust brightness and contrast properly

- 远离高温、阳光直射与碰撞冲击

Keep away from high temperature, direct sunlight and collision

- 长期不用防尘遮盖，非专业人员禁止拆卸

Cover for dust protection when not in use; no disassembly by non-professionals

3. 无线键鼠 **Wireless Keyboard & Mouse**

- 避免液体溅入与受潮

Avoid liquid splashing and moisture

- 轻柔操作，勿过度按压点击

Operate gently; do not press or click excessively

- 放置在干燥稳定位置，定期检查灵敏度

Place in dry and stable area; check sensitivity regularly

三、核心规范 **Core Rules**

- 禁止强行断电、暴力操作、擅自拆机

NO forced power-off, violent operation, or unauthorized disassembly

- 按步骤排查故障，无法解决立即联系售后

Troubleshoot step by step; contact after-sales immediately if unresolved